# **TFS1000 - Freestanding Wood Fireplace**

Information Sheet for Builders and Architects

# FIRE BY **ESCEO**.

#### SPECIFICATIONS


Est. Heating Area	150-220m2
Efficiency	62%
Average Particulate Emission	1.00g/kg
Appliance Weight	216kg
Fuel Type	Hardwood
Maximum Log Size	750mm
Clean Air Approved	Yes (to AS/NZS 4012:2014 & AS/NZS 4013:2014)
Compliance	Clearance tested to AS/NZS 2918:2018
Power Requirement	3 Pin 10A 240V power supply
Damper Control	Yes - top right of the appliance
Flue Type	Natural Draught - Direct Vent *
Flue Size	150mm Inner/200mm Outer/250mm outer
Flue Length (minimum)	4.5m - from the top of the appliance
Combustion Air Intake	External




Not required
Yes
Vermiculite
Yes - 2 speed Fan
Not required
Prohibited

\*Please refer to TFS650-1000 Flue Specification Guide for further guidance.


#### INSTALLATION

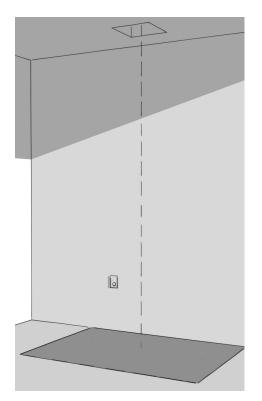

- A location is selected with electrical supply within 1m of the fireplace.
- Obtain flue centreline to ensure the flue run is clear from obstructions.
- Install the floor protector, allowing for all requisite safety clearances.

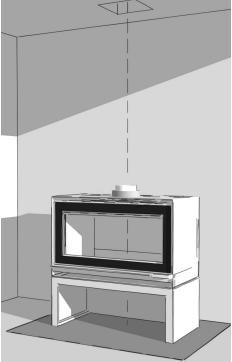

- Install the fireplace on a plinth, base or preformed heat resistant structure following the TFS1000 Installation Manual.
- It is recommended that only AHHA approved/ accredited tradespeople should be used to install this fireplace.
- Fix the fire to the plinth, base, or structure and the plinth or base to the floor.

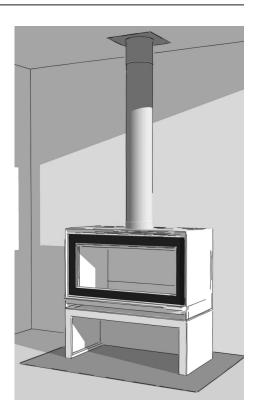

- Install the flue and liner to the correct configuration and height. The ceiling plate should be fitted at this time.
- Complete the installation by installing any additional components and connecting the electrical supply.
- Operate the fireplace for the first week with a hot fire and the damper fully open.

# **TFS1000 - Freestanding Wood Fireplace**

Information Sheet for Builders and Architects



## FLOOR PROTECTOR

A floor protector of a suitable non-combustible and heat resistant material is required when the fireplace base is at **375mm or more above** a combustible floor. The floor protector must be continuous and extend fully beneath the fireplace following the dimensions detailed below.

To reduce the 375mm clearance from a combustible floor to the fireplace base the fireplace must be installed over an insulating, heat resistant hearth complying with *AS/NZS 2918*.

#### FIREPLACE BASE

The TFS1000 Fireplace must be installed a minimum of **375mm** above the finished level of a combustible surface. A fully continuous and non-combustible base is required to support the load of the appliance and flue system above. Escea provides a GRC plinth or sheet-metal base option, which are designed to compliment the TFS1000 Fireplace.

#### SEISMIC RESTRAINT

The fireplace must be restrained to the plinth, base or structure and the plinth or base to the floor. Fixings should be into a structural component (concrete or floor joist), be suitable for the location, and of the appropriate length.

### APPLIANCE

The TFS1000 is constructed from 4mm painted mild steel panels with a 5mm glass door and utilises a direct vent co-axial flue system. Additionally, it has a heat activated, two speed fan that turns on to distribute heat further into your room.


Appliance Width (A)	988mm
Appliance Depth (B)	506mm
Appliance Height (C)	606mm
Minimum Appliance Height from Floor (D)	375mm
Minimum Ceiling Height from top of TFS1000	1420mm
Firebox Opening Size	871mm W x 368mm H
Glass Viewing Area	940mm W x 480mm H


Door Handle Height off Base	94mm	
Damper Control Handle Height off Base	595mm	
Ash Lip Height off Base	168mm	

#### CLEARANCES

All clearances are prescribed for their proximity to adjacent combustible and heat sensitive materials, including timber framed walls. To reduce these dimensions follow the requirements in *AS/NZS 2918 - Sec 3*.

#### Parallel

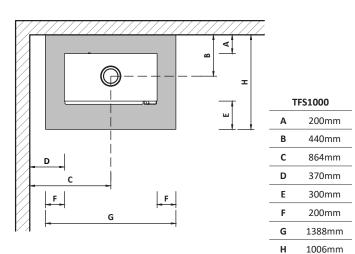

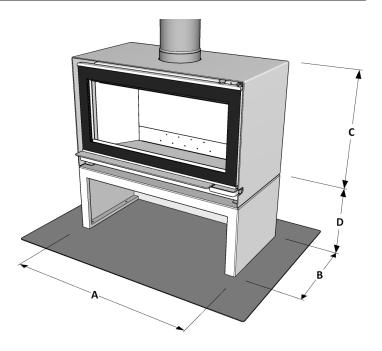

Objects placed in front of the fireplace should maintain a safe distance. Materials handle heat differently and it is recommended to keep all objects a minimum of 1.2m from the fireplace.

## Corner

